

16.7 KENO


The 16.7 Keno has several features that the operator has the option of using.

First press the test button and enter the **test/audit** mode, then pressing numbers on the key pad 43-45-47-50-49-41 will enter into % set up mode. To turn the percentage on, press 25; to turn percentage off press 50. The percentage is preset at 85% and can be adjusted by the operator from 0 to 99%, by simply pressing the numbers on the key pad 1 through 10, with 10 representing 0. (For Example: for a setting of 67% you would first press the number 6 and then the number 7. For a setting of 90%, first press the Number 9 and the number 10, with 0 represented by the number 10.) To return to **test/audit** screen press cancel button. In **test/audit** screen you can read coins in, points played, and points awarded. Points reset read by pressing 32-34-36-33-35-37. This information will appear below the grid of zeros and can be cleared Back to zero by pressing 71-79-73-77-75-70. You can also reset books by pressing 2-7-3-9-1-5. When the unmarked button is pushed, test ends and returns to game.


BET

CANCEL

PLAY

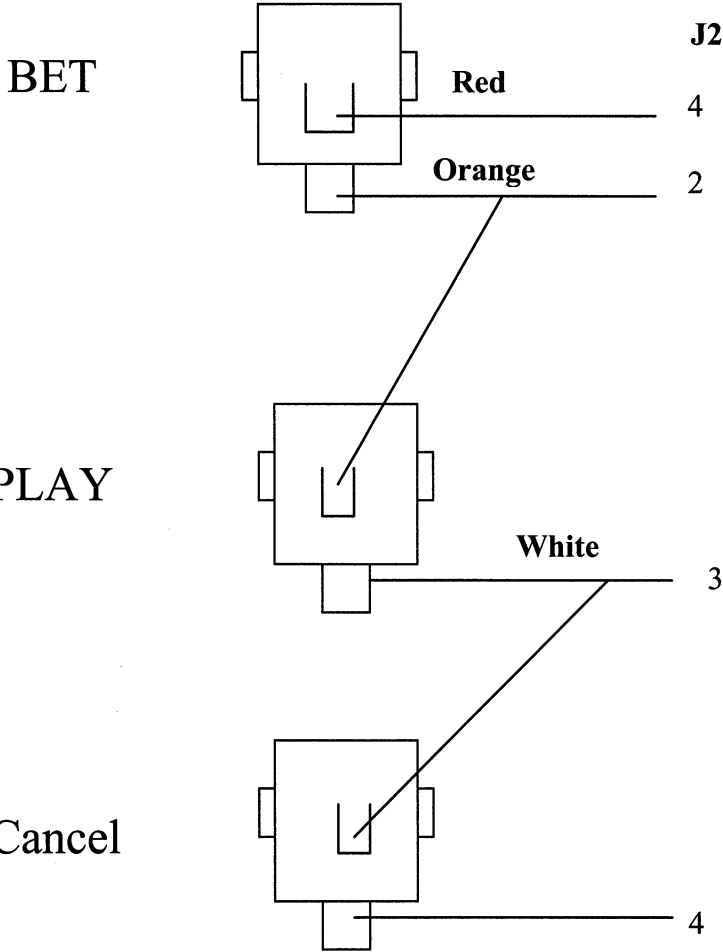

5 Not Used

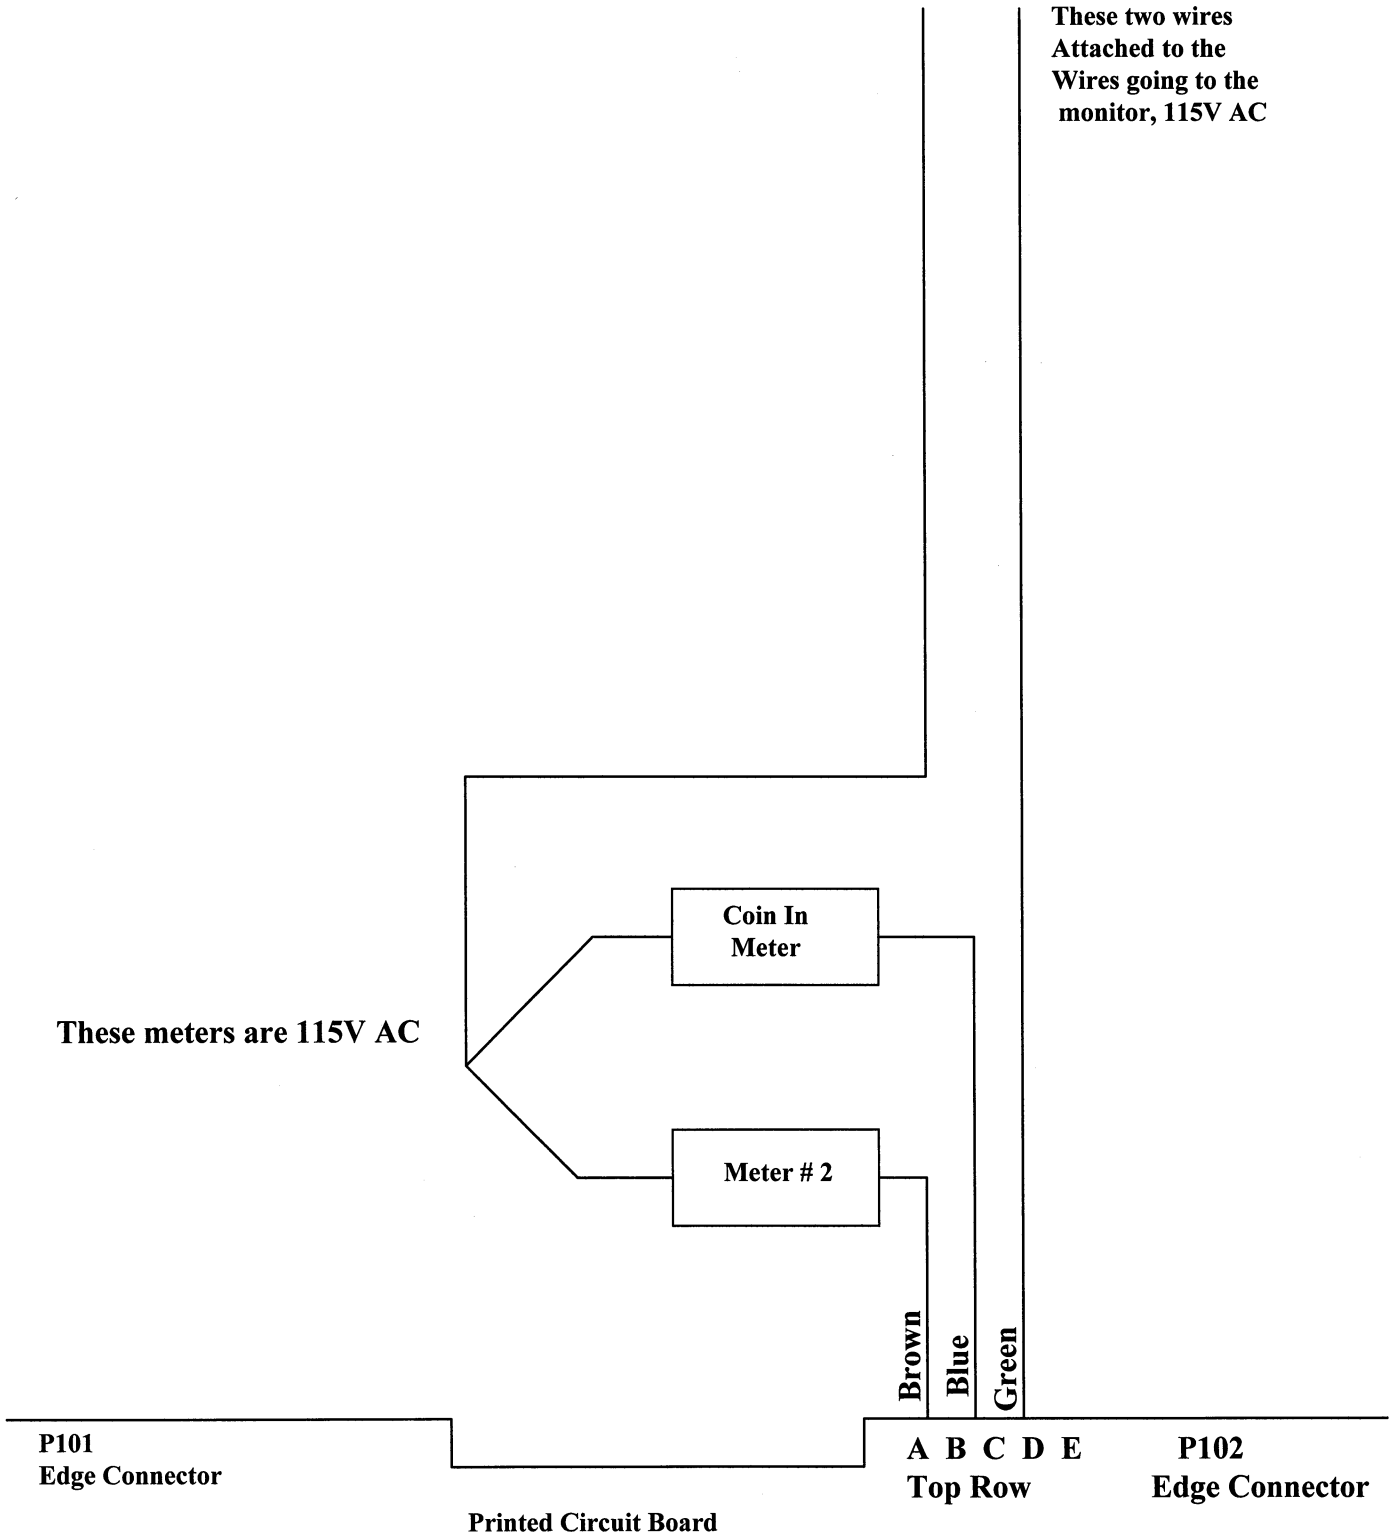

903 Keno

P101

+5v	1	A	+5v
+12v	2	B	+12v
Gnd	3	C	Gnd & Encoder Pin 3
	4	D	
	5	E	
Gnd	6	F	Gnd
+12v	7	H	+12v & Encoder Pin 6
	8	J	
	9	K	
	10	L	
	11	M	
	12	N	
	13	P	
	14	R	
	15	S	
	16	T	
	17	U	Test
	18	V	Test
	19	W	
	20	X	
	21	Y	
	22	Z	
	23	AA	
	24	BB	Coin in 1
	25	CC	Coin in 2
	26	DD	
	27	EE	
	28	FF	

P102

1	A	
2	B	Meter #1
3	C	Meter # 2
4	D	Meter AC
5	E	
6	F	
7	H	
8	J	
9	K	
10	L	
11	M	
12	N	
13	P	
14	R	
15	S	
16	T	
17	U	
18	V	
19	W	
20	X	
21	Y	
22	Z	
23	AA	
24	BB	
25	CC	
26	DD	Vertical
27	EE	Video Gnd
28	FF	Horizontal

AC Return 15v
AC in 15v

Encoder Pin 7
Encoder Pin 8
Encoder Pin 9
Encoder Pin 10

Speaker
Speaker

Video Blue
Video Green
Video Red

Encoder Pin 1 & 2 Not Used
4 & 5 Not Used