


# BestCo Printer Programmer Interface Rev. E1

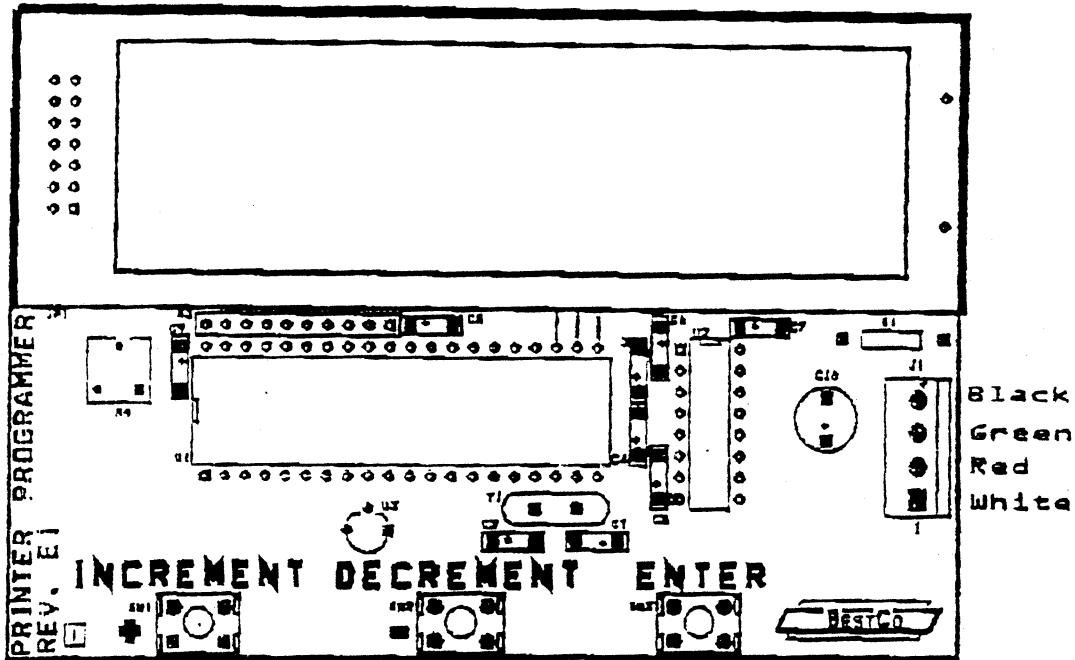

The Printer Programmer Interface enables the user to customize the BestCo Printer Interface Board (Time, Date, and a Customized, 4 line, 20 character message. The user Can also clear the Printer boards memory by clearing Battery Backed Ram. The user will Use the connector cable supplied and make a connection between J1 of the programmer Board to J2 of the BestCo Printer Board. **\*\*Make sure the cables are oriented in the correct direction and there is no power applied to either board\*\***. Once power is Supplied to the Printer board the programmer board will be ready to operate.

## **Set Up:**

To enter the Main Menu press SW5 button on the Printer board. Everything will be handled from the programmer board from this point on.

This should be displayed:

**1 DATE/TIME      2: MSG**  
**3. BB RAM        4: EXIT**

Use the Decrement, Increment, to tab from selection to selection. Once the blinking cursor is on the appropriate selection press the Enter button to move to the next screen. Decrement tabs cursor to the right and the Increment button tabs back to the left.

### **Date/Time**

Pressing the Enter Key while the blinking cursor is on this selection will move to the next menu so the user can read or set the date and time. TIME uses the HHMM format and DATE uses the MMDDYY format.

<b>Examples:</b>	<b>TIME</b>	<b>DATE</b>
	0254	081001
	2:54	August 10, 2001

### **2:MSG**

Pressing the Enter Key while the blinking cursor is on this selection will move to the next menu so the user can create a customized message. The user can READ current message, SET a new customized message, or CLEAR current message from this menu.

**\*\*Each line can have a maximum of 20 characters per line, and the user can use up to 4 lines.\*\***

### **3:BB RAM**

Pressing the Enter Key while the blinking cursor is on this selection will move to the next menu so the user can clear or reset Printer Board's records.

## INSTRUCTIONS:


### POWER DOWN:

Power down Printer board and disconnect printer connector applied to J4.

### CONNECTIONS:

Connect Programmer cable from programmer board (J1) to Printer board (J4).

**\*\*Make sure proper side of cable is connected to proper board.\*\***

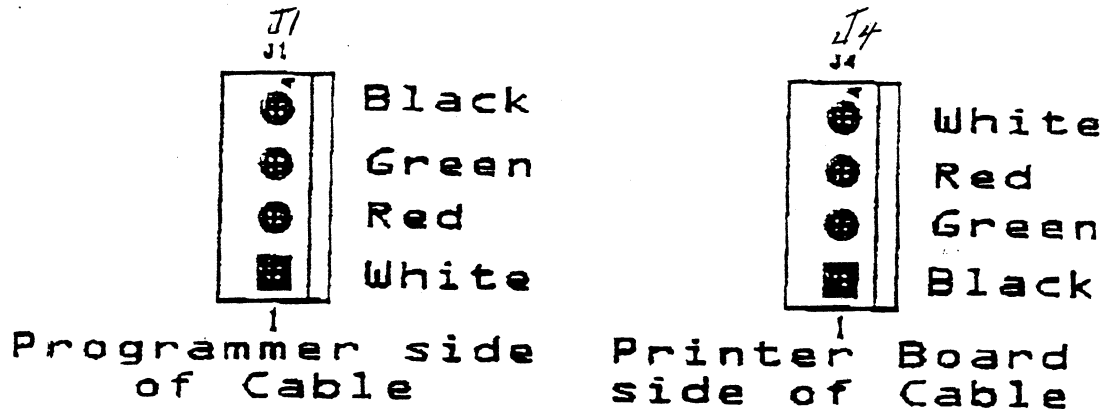

### POWER UP:

After the Programmer cable has been properly connected to both the Printer board and the Programmer Interface board the apply power to the Printer Board.

This should be displayed:

Printer Programmer

Ver. 1.0