



DIP SW 4		1	2	3	4	5	6	7	8
BUTTON LOCKOUT *	OFF	OFF							
	ON	ON							
LOCKOUT POLARITY	ACTIVE HIGH		OFF						
	ACTIVE LOW		ON						
PRINTER TYPE	EPSON 276A			OFF	OFF				
	STAR 300			ON	OFF				
	ITHACA 78			OFF	ON				
	CITIZEN 3541			ON	ON				
PAPER LOW SENSOR	OFF					OFF			
	ON					ON			
NOT USED	LEAVE OFF						OFF	OFF	OFF

\* THIS FEATURE IS ONLY USED TO LOCKOUT THE BUTTON PANEL SWITCHES

SET BILL VALIDATOR DIP SWITCHES FOR 1 PULSE PER DOLLAR. WHEN YOU CHOOSE THE DENOMINATION WITH THE DIP SWITCHES ON THE BOARD, THE NEW SOFTWARE WILL KNOW HOW MANY CREDITS TO GIVE PER DOLLAR.

\*\*NOTE: IN ORDER TO SET FOR PENNY PLAY YOUR BILL ACCEPTOR MUST BE ADJUSTABLE TO 5 OR 10 PULSES PER DOLLAR.

## DBA INPUT & LINE & POKER

COMPONENT SIDE		PIN #	SOLDER SIDE	
POKER	8 LINE GAME		8 LINE GAME	POKER
Red Video	RED VIDEO	1	GREEN VIDEO	Green Video
Blue Video	BLUE VIDEO	2	SYNC (NEG. COMP.)	Sync
Same >	SPEAKER POSITIVE	3	SPEAKER GROUND	< Same
		4		
		5		
		6		
Same >	DROP DOOR SWITCH	7	CHANGE SWITCH	< Same
Same >	LOGIC DOOR SWITCH	8	MAIN DOOR SWITCH	< Same
Deal / Draw	START SWITCH	9		
Hold # 2	LOW SWITCH	10		
Bet	PLAY CREDIT SWITCH	11		
Hold # 4	TAKE SCORE SWITCH	12		
Hold # 3	DOUBLE UP SWITCH	13		
Hold # 1	HIGH SWITCH	14		
	BUTTON LOCKOUT	15		
Hold # 5	<i>Big to 14</i>	16		
		17		
Same >	MARS IN (DBA INPUT) 18 >	18	COIN "A" INPUT	< Same
Same >	COIN "B" INPUT	19		
Same >	BOOKEEPING SWITCH	20	STATS / SETUP SWITCH	< Same
Same >	COLLECT SWITCH	21	← 21	
		22		
Same >	COIN "A" METER	(23)		
Same >	BELL	24	LOCKOUT MARS (DBA)	< Same
Same >	TOWER LAMP	25		
Same >	Credits WON Meter	26		
Same >	Credits PLAYED Meter	27		
Same >	COIN OUT METER	(28)		
Deal / Draw	START LAMP	29		
Hold # 2	LOW LAMP	30	COLLECT LAMP?	
Bet Lamp	PLAY CREDIT LAMP	31	PROGRESSIVE LINK	< Same
Hold # 4	TAKE SCORE LAMP	32		
Hold # 3	DOUBLE UP LAMP	33	TXD <i>GREEN WIRE FROM PRINTER</i>	
Hold # 1	HIGH LAMP	34		
Same >	DTR <i>BLUE/PINK WIRE FROM PRINTER</i>	35		
Same >	GROUND	36	GROUND	< Same

**POWER CONNECTOR**

COMPONENT SIDE		PIN #	SOLDER SIDE	
POKER *	8 LINE GAME		8 LINE GAME	POKER *
	GROUND	1	GROUND	
	GROUND	2	GROUND	
	+ 5 VOLTS D.C.	3	+ 5 VOLTS D.C.	
	+ 5 VOLTS D.C.	4	+ 5 VOLTS D.C.	
	+ 12 VOLTS D.C.	5	+ 12 VOLTS D.C.	
	NOTE #	6		
		7		
		8		
	GROUND	9	GROUND	
	GROUND	10	GROUND	

NOTE # Whatever voltage is used for your meters, put the same voltage in here.

\* Poker board pinned the same as 8 Line Game on this connector.

			75 for 1
			40 for 1
			15 for 1
			12 for 1
			10 for 1
			8 for 1
		ANY	5 for 1
	ANY	ANY	2 for 1
			100 for 1
			50 for 1
			18 for 1
			14 for 1
			10 for 1
			10 for 1
		ANY	5 for 1
			2 for 1

With 8 or more bet:  
 9 of any one =  
 3000 for 1  
 8 of any one =  
 1500 for 1  
 7 of any one =  
 300 for 1

If cherry bonus is on  
 5 or more cherries  
 pays bonus.

<sup>9322 / 9325</sup>  
 100 for 1

9 of any One =  
 1000 for 1

8 of any One =  
 500 for 1

7 of any One =  
 100 for 1