

JINGLE BELL

VERSION: V201US

1. DIP SWITCH SETTING

DIP SW. 1		1	2	3	4	5	6	7	8
DEMO MUSIC	NO	OFF							
	YES	ON							
W-UP GAME	NO		OFF						
	YES		ON						
MIN. BET	1			OFF					
	8			ON					
SPIN SPEED	SLOW				OFF				
	QUICK				ON				
STRIP GIRL	NO					OFF			
	YES					ON			
PAYOUT MODE	NORMAL						OFF		
	AUTO						ON		
PLAYER'S PANEL	TYPE A							OFF	OFF
	TYPE B							ON	OFF
	TYPE C							OFF	ON
	TYPE A							ON	ON

DIP SW. 2		1	2	3	4	5	6	7	8
MIAN GAME RATE	55%	OFF	OFF	OFF					
	60%	ON	OFF	OFF					
	65%	OFF	ON	OFF					
	70%	ON	ON	OFF					
	75%	OFF	OFF	ON					
	80%	ON	OFF	ON					
	85%	OFF	ON	ON					
W-UP CHANCE	90%	ON	ON	ON					
	93%				OFF	OFF	OFF		
	94%				ON	OFF	OFF		
	95%				OFF	ON	OFF		
	96%				ON	ON	OFF		
	97%				OFF	OFF	ON		
	98%				ON	OFF	ON		
	99%				OFF	ON	ON		
KEY IN LIMIT	1000							OFF	OFF
	3000							ON	OFF
	5000							OFF	ON
	10000							ON	ON

DIP SW. 3		1	2	3	4	5	6	7	8
KEY IN RATE	1	OFF	OFF	OFF					
	5	ON	OFF	OFF					
	10	OFF	ON	OFF					
	30	ON	ON	OFF					
	50	OFF	OFF	ON					
	100	ON	OFF	ON					
	200	OFF	ON	ON					
COIN A RATE	500	ON	ON	ON					
	1				OFF	OFF	OFF		
	2				ON	OFF	OFF		
	5				OFF	ON	OFF		
	10				ON	ON	OFF		
	20				OFF	OFF	ON		
	40				ON	OFF	ON		
SYSTEM LIMIT	50				OFF	ON	ON		
	100				ON	ON	ON		
	5000							OFF	OFF
	10000							ON	OFF
	30000							OFF	ON
NO LIMIT							ON	ON	

DIP SW. 4		1	2	3	4	5	6	7	8	
MIN. PLAY FOR FEVER (note 1)	8	OFF								
	16	ON								
COIN C RATE	1			OFF	OFF	OFF				
	2			ON	OFF	OFF				
	5			OFF	ON	OFF				
	10			ON	ON	OFF				
	20			OFF	OFF	ON				
	40			ON	OFF	ON				
	50			OFF	ON	ON				
	100			ON	ON	ON				
	KEY OUT RATE	1						OFF	OFF	
		10						ON	OFF	
50							OFF	ON		
100							ON	ON		
PLAY LINE	8								OFF	
	16								ON	

DIP SW. 5		1	2	3	4	5	6	7	8
MAX. PLAY (note 2)	8	OFF	OFF						
	16	ON	OFF						
	32	OFF	ON						
	64	ON	ON						
SPINNING	NON-STOP			OFF					
HANDS COUNT	NO				OFF				
	YES				ON				
HANDS COIN RATE	1					OFF	OFF		
	5					ON	OFF		
	10					OFF	ON		
	25					ON	ON		
HANDS COIN VALUE	20							OFF	
	40							ON	
NO USED									

Note 1: Min. play for Fever here indicates individual play.

Note 2: Max. Play here indicates individual play.

Note 3: Max. Play here indicates both sides' total.

Caution!! Any change on PLAY LINE or MAX. PLAY will cause system reset. System reset maybe

Relative value by Max. Play change:

MAX. PLAY (note 3)	8	16	32	64	128
W-UP BONUS BASE	30	50	100	150	300
W-UP BONUS TARGET	500	1000	2000	3000	5000
W-UP POOL	50	100	200	300	600

CONNECTION DIAGRAM:

PARTS SIDE		SOLDER SIDE	
B TYPE PANEL	C TYPE PANEL		
VIDEO RED	VIDEO RED	1	VIDEO GREEN
VIDEO BLUE	VIDEO BLUE	2	VIDEO SYNC
SPEAKER	SPEAKER	3	GND
		4	
		5	
		6	
		7	
		8	
START/ALL STOP/1/2 W-UP	START/1/2 W-UP	9	
SMALL/STOP 3/ODDS	SMALL/STOP 3/ ODDS	10	
BLUE PLAY/STOP 2/2 W-UP	BLUE PLAY/ALL STOP/2 W-UP	11	
TAKE/STOP 1	TAKE/STOP 1	12	
RED PLAY/W-UP	RED PLAY/W-UP	13	
		14	
		15	
BIG	BIG/STOP 2	16	
		17	
COIN A	COIN A	18	KEY IN
		19	COIN C
OPERATOR (RECORD)	OPERATOR (RECORD)	20	TEST
PAYOUT	PAYOUT	21	KEY OUT
		22	HOPPER SWITCH
COIN A METER	COIN A METER	23	
KEY IN METER	KEY IN METER	24	
		25	
COIN C METER	COIN C METER	26	
HOPPER METER	HOPPER METER	27	
KEY OUT METER	KEY OUT METER	28	
LAMP:START/ALL STOP/1/2 W-UP	LAMP:START/1/2 W-UP	29	
LAMP:SMALL/STOP 3/ODDS	LAMP:SMALL/STOP 3/ ODDS	30	
LAMP:BLUE PLAY/STOP 2/2 W-UP	LAMP:BLUE PLAY/ALL STOP/2 W-UP	31	
LAMP:TAKE/STOP 1	LAMP:TAKE/STOP 1	32	
LAMP:RED PLAY/W-UP	LAMP:REDPLAY/W-UP	33	
LAMP:BIG	LAMP:BIG/STOP 2	34	
ATTENDANT	ATTENDANT	35	
GND	GND	36	GND

PARTS SIDE	PARTS SIDE	SOLDER SIDE	
GND	GND	1	GND
GND	GND	2	GND
+5V	+5V	3	+5V
+5V	+5V	4	+5V
+12V	+12V	5	+12V
COUNTER POWER	COUNTER POWER	6	
HOPPER CONTROL	HOPPER CONTROL	7	
		8	
GND	GND	9	GND
GND	GND	10	GND