

OCEAN PARADISE

VERSION: V101US

1. DIP SWITCH SETTING

DIP SWITCH 1		1	2	3	4	5	6	7	8
DEMO MUSIC	YES	OFF							
	NO	ON							
NON STOP	NO		OFF						
	YES		ON						
RECORD PASSWORD	YES			OFF					
	NO			ON					
ODDS TABLE	YES				OFF				
	NO				ON				
AUOT TAKE FOR NO W-UP	NO					OFF			
	YES					ON			
W-UP GAME	YES						OFF		
	NO						ON		
W-UP PLAY	POKER 1							OFF	OFF
	POKER 2							ON	OFF
	SYMBOL							OFF	ON
								ON	ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
CHANCE LEVEL	LOW	OFF							
	HI	ON							

Remark: for normal operation, pls set CHANCE LEVEL on OFF- low. ON- hi is for Casino use.

2. SYSTEM SETUP (Push Record key to slect the following item):

Default settings are Underlined.

CONTENTS	SETTING SELECTION
MAX. BET	8, 16, 24, 32, 48, <u>64</u> , 128, 256
MIN. BET	1, <u>8</u> , 16, 24
SYSTEM LIMIT	<u>NO</u> , 500*MAX. BET, 1000*MAX. BET, 2000*MAX. BET, 3000*MAX. BET
COIN/KEY IN/KEYOUT RATE	1,2,4,5,10,15,20,25,40,50,75, <u>100</u> ,200,250,400,500,1000
TICKET RATE	1,2,4,5,10,15,20,25,30,40,50,60,75,80, <u>100</u> ,200,500
CREDIT LIMIT	1000,5000, <u>10000</u> ,90000
HAND COUNT	YES, <u>NO</u>
MAIN GAME RATE	60%, 65%, <u>70%</u> , 75%, 80%, 85%, 90%, 95%
W-UP GAME RATE	60%, <u>70%</u> , 80%, 90%

1/2

3. CONNECTION DIAGRAM

PARTS SIDE		SOLDER SIDE
VIDEO RED	1	VIDEO GREEN
VIDEO BLUE	2	VIDEO SYNC
SPEAKER	3	GND
	4	
	5	
	6	
TICKET OUT BUTTON	7	
TICKET SWITCH	8	
START	9	
SMALL/ STOP 2	10	
PLAY (BET)	11	
TAKE/ STOP 3	12	
DOUBLE UP/ STOP 1	13	
	14	
	15	
BIG/ ALL STOP	16	
	17	
COIN A	18	KEY IN
	19	COIN C
BOOK	20	TEST
PAYOUT	21	KEY OUT
	22	HOPPER SWITCH
COIN A METER	23	
KEY IN METER	24	
	25	
COIN C METER	26	
HOPPER METER	27	
KEY OUT METER	28	
LAMP: START	29	
LAMP: SMALL/ STOP 2	30	
LAMP: BET	31	
LAMP: TAKE/ STOP 3	32	
LAMP: W-UP/ STOP 1	33	
LAMP: BIG/ ALL STOP	34	
ATTENDANT	35	
GND	36	GND

GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
+12V	6	+12V
HOPPER/ TICKET CONTROL	7	HOPPER/TICKET CONTROL
	8	
	9	
GND	10	GND

2/2

On board's solder find JP2.

Cut the trace bet 1 and 2, then solder 2 & 3 together