



Three Set an Progressive

Precautions
(Before turning on the power)

- * Use a 1 : 1 transformer for an old type monitor. Without the transformer, once the board is short-circuited, it can not be repaired.
- * Do not short the battery or do not pull jumper pins off, or else the security system will be disrupted. Such failure will be repaired for fee.

BASIC SETTING

PAYOUT %	85	Payout per sentage
MAX BET	32	Maximum amount of BET
FIRST BET	1	Amount of the first bet
CONTINUE BET	1	Amount of the second or above times bet
KEY-IN CREDIT	100	Key-In credit
COIN-A CREDIT	10	Coin A credit
COIN-B COIN	1	Amount of Coin B
COIN-B CREDIT	50	Coin B credit
HOPPER COIN	1	Hopper coin
HOPPER CREDIT	100	Hopper credit
CREDIT LIMIT	5000	Credit limit
CREDIT IN LIMIT	2000	Credit in limit
PAYOUT FLASH		Usually system
Can be choosed payout method		
AUTO		Will pay the victory credit on each time
SUSTAIN		During pressing the payout button, the credit will be paid
AUTO-2		To reach hopper credit, automatically to press the payout button
HOPPER NONE		No hopper
ACT-H		Active high hopper method
ACT-L		Active low hopper method
HOPPER EMPTY NONE		Can not indicate the shortage of hopper balance
ACT-H		To notice of the shortage of balance, and to lock the payout button by active high
ACT-L		To notice of the shortage of balance, and to lock the payout button by active low
SINGLE OUT OFF		Invalid to payout of single gift
ON		Available to payout of single gift
COIN-B COUNTER OFF/ON		To set Yes or No Coin B counter
FRACTION CUTOFF OFF		Usually OFF
ON		When payout, will follow to hopper credit unit
ON-2		When payout, will follow to hopper credit unit, cut down the fraction
SCREEN FLIP NORMAL/INVERT		Turn over the screen monitor

EXTEND SETTING

DUP NUDE	ON / OFF	To set the monitor for double up nude whether picture ON or NOT
DOWN SPEED	0/ 1/ 2/ 3/ 4	To adjust the speed for the time of credit down. 0 is the fastest and 4 is the most slow.
SOUND IN DEMO	ON / OFF	To adjust the sound whether switch ON or OFF during the demonstration
SCI-PORT	LF	When to connect the SCI_PORT to printer, not power on CR
	CR+LF	To put power CR and LF
DOUBLE UP GAME	ON / OFF	Whether Yes or Not the double game up
SKILLS STOP	ON / OFF	Whether Yes or Not the Skill stop
CONTINUOUS STOP	ON / OFF	Whether Yes or Not the Continuous stop

SETTING SPECIAL ALLOTMENT (User choice)

DUP IN OUT	Double Up in out	To adjust the allotment at the Double Up game To set minus position, DUP game will strong, plus position, become weak
DUP JOKER	Double up Joker	To adjust the per centages the Joker is coming in the Double Up games
LOVE CHANCE	Love chance	To adjust the per centages the Love chance is coming
LC CARD 2	Love chance card 2	Able to adjust the love chance is coming in the second cards at the double up games
LC CARD 3	Love chance card 3	Able to adjust the love chance is coming in the third cards at the double up games
LC CARD 4	Love chance card 4	Able to adjust the love chance is coming in the fourth cards at the double up games
LC CARD 5	Love chance card 5	Able to adjust the love chance is coming in the fifth cards at the double up games

POOL SETTING

PAY POINT 1 Charging bonus-1's falling range from LOW to HIGH.
PAY POINT 2 Charging bonus-2's falling range from LOW to HIGH.
PAY POINT 3 Charging bonus-3's falling range from LOW to HIGH.

POOL RATE 1 Charging the pool ratio of bonus-1.
pool rate 2 Charging the pool ratio of bonus-2.
POOL RATE 3 Charging the pool ratio of bonus-3.

POOL DISPLAY FLOAT Displaying the amount of each pool as the value
of bonus.
FIX Displaying the value of LOW as the value bonus.

POOL VALUE

POOL 1/ 2/ 3 Setting the amount of each pool

NETWORK STATUS

This notifies the status of all games.
White numbers indicate the status of the machine which you are operating.
Light blue numbers indicate the status of the other connected machines.
Blue numbers indicate machines which are not connected in the network.

SETTING DIPSWITCHES Delineation Chart

DIPSWITCH 1

PCV DIP-SW	1	1	2	3	4	5	6	7	8
ID No 00 (Master)	OFF	OFF	OFF	OFF	OFF				
01	ON	OFF	OFF	OFF	OFF				
02	OFF	ON	OFF	OFF	OFF				
03	ON	ON	OFF	OFF	OFF				
04	OFF	OFF	ON	OFF	OFF				
05	ON	OFF	ON	OFF	OFF				
06	OFF	ON	ON	OFF	OFF				
07	ON	ON	ON	OFF	OFF				
08	OFF	OFF	OFF	ON	ON				
09	ON	OFF	OFF	ON	ON				
10	OFF	ON	OFF	ON	ON				
11	ON	ON	OFF	ON	ON				
12	OFF	OFF	ON	ON	ON				
13	ON	OFF	ON	ON	ON				
14	OFF	ON	ON	ON	ON				
15	ON	ON	ON	ON	ON				
OFF (FLX)						OFF			
OFF (FLX)							OFF		
OFF (FLX)								OFF	
OFF (FLX)									OFF

DIP-SW 2

Multiple boards can be connected in series. The first board is taken as the master, and others are slaves. The master is numbered "00" and slaves are numbered "01", "02", "03" ...consecutively. The DIP-SW 2 switches on the master board and the last slave board must be at all ON position, and the other slaves are at all OFF position.

THREE SEVENS TURBO Play Percentage Change Information

Turn on game

Next

Go to your 2 accounting buttons inside of cabinet and find and label your Data/Analyzer button.. The other Red button is Conform button You are now ready for settings. Exit back to Game Screen.

Next

Push on Data/Analyzer button 3 times. You should get a Data screen.

Next

Push on Conform button 1 time

Next

Push on Data /Analyzer button 5 times. The screen you see will add one line of information.

Next

Push START on machine button panel, then push SMALL on machine button panel and then push TAKE SCORE on machine button panel. This should put your screen on basic setting for you to make changes.

Top payout H % and then payout L%

While holding in on the Conform button in cabinet press the SMALL button on the machine panel to change percentage which can be from 60 % to 95%..

Suggest that the machine be set at 70% H and 60% L per board manufacturer.

Next

Press DOUBLE UP button on machine button panel 4 times to return to game screen.

Three Sevens Game Board (3-7's)

Notes;

TO MAKE DOUBLE UP WORK ON BOARD

May have to remove or cut #4, 5 and 6 jumpers on the 36pin harness connector. Otherwise they cause a conflict of the buttons on this Three sevens Turbo game.

CHANGING BONUS POINTS

This board is preset at recommended settings for best use. AVOID CHANGING FROM THESE RECOMMENDED SETTINGS OR DO SO AT YOUR OWN RISK.

EDGE CONNECTOR 72 PIN		
PARTS SIDE		SOLDER SIDE
VIDEO RED	1	VIDEO GREEN
VIDEO BLUE	2	VIDEO SYNC.
SPEAKER	3	SP. GND
	4	
	5	
	6	
	7	
SERVICE COIN	8	
START	9	
ODDS SMALL	10	
BET	11	
TAKE SCORE	12	
DOUBLE UP	13	
	14	
	15	
BIG	16	
	17	
COIN A	18	KEY IN
COIN C	19	COIN D (HOPPER)
ANALIZER	20	CONFIRM
PAYOUT	21	KEY DOWN
HOPPER FULL	22	HOPPER SW
COUNTER A	23	
COUNTER B	24	
COUNTER C	25	
COUNTER D	26	LACK OF HOPPER COUNTER
HOPPER COUNTER	27	
KEY DOWN COUNTER	28	
START LAMP	29	
CANCEL LAMP	30	
BET LAMP	31	
TAKE SCORE LAMP	32	
DOUBLE UP LAMP	33	
	34	
	35	
GND	36	GND